



## Deleting the Fault & Operation Logs

1. Use the **Jog/Select** knob to go to **Faults/Logs/Alerts**.

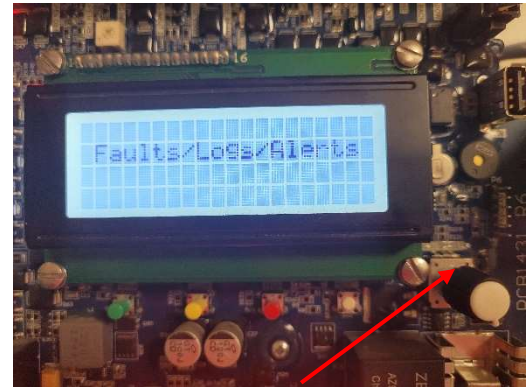

Jog/Select

2. Press the **Jog/Select** knob to enter. The first log you see is the **Fault Log**. The **Operation Log** requires two turns to the right. To delete either of them, push and hold both the **Red Stop** button and the **Jog/Select** knob at the same time until you hear a beep.
3. When the log is cleared ( or deleted), the screen will go back to the "**Faults/Logs/ Alerts**" title screen.

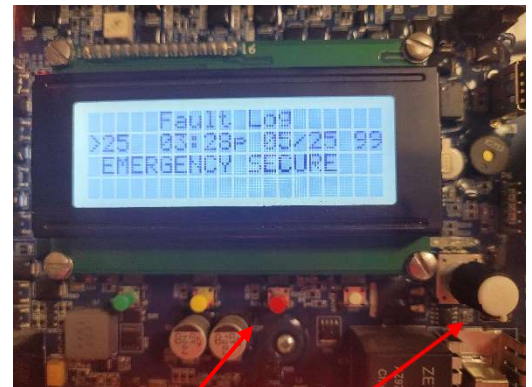

Stop

Jog/Select