


LEFTHAND OPERATOR

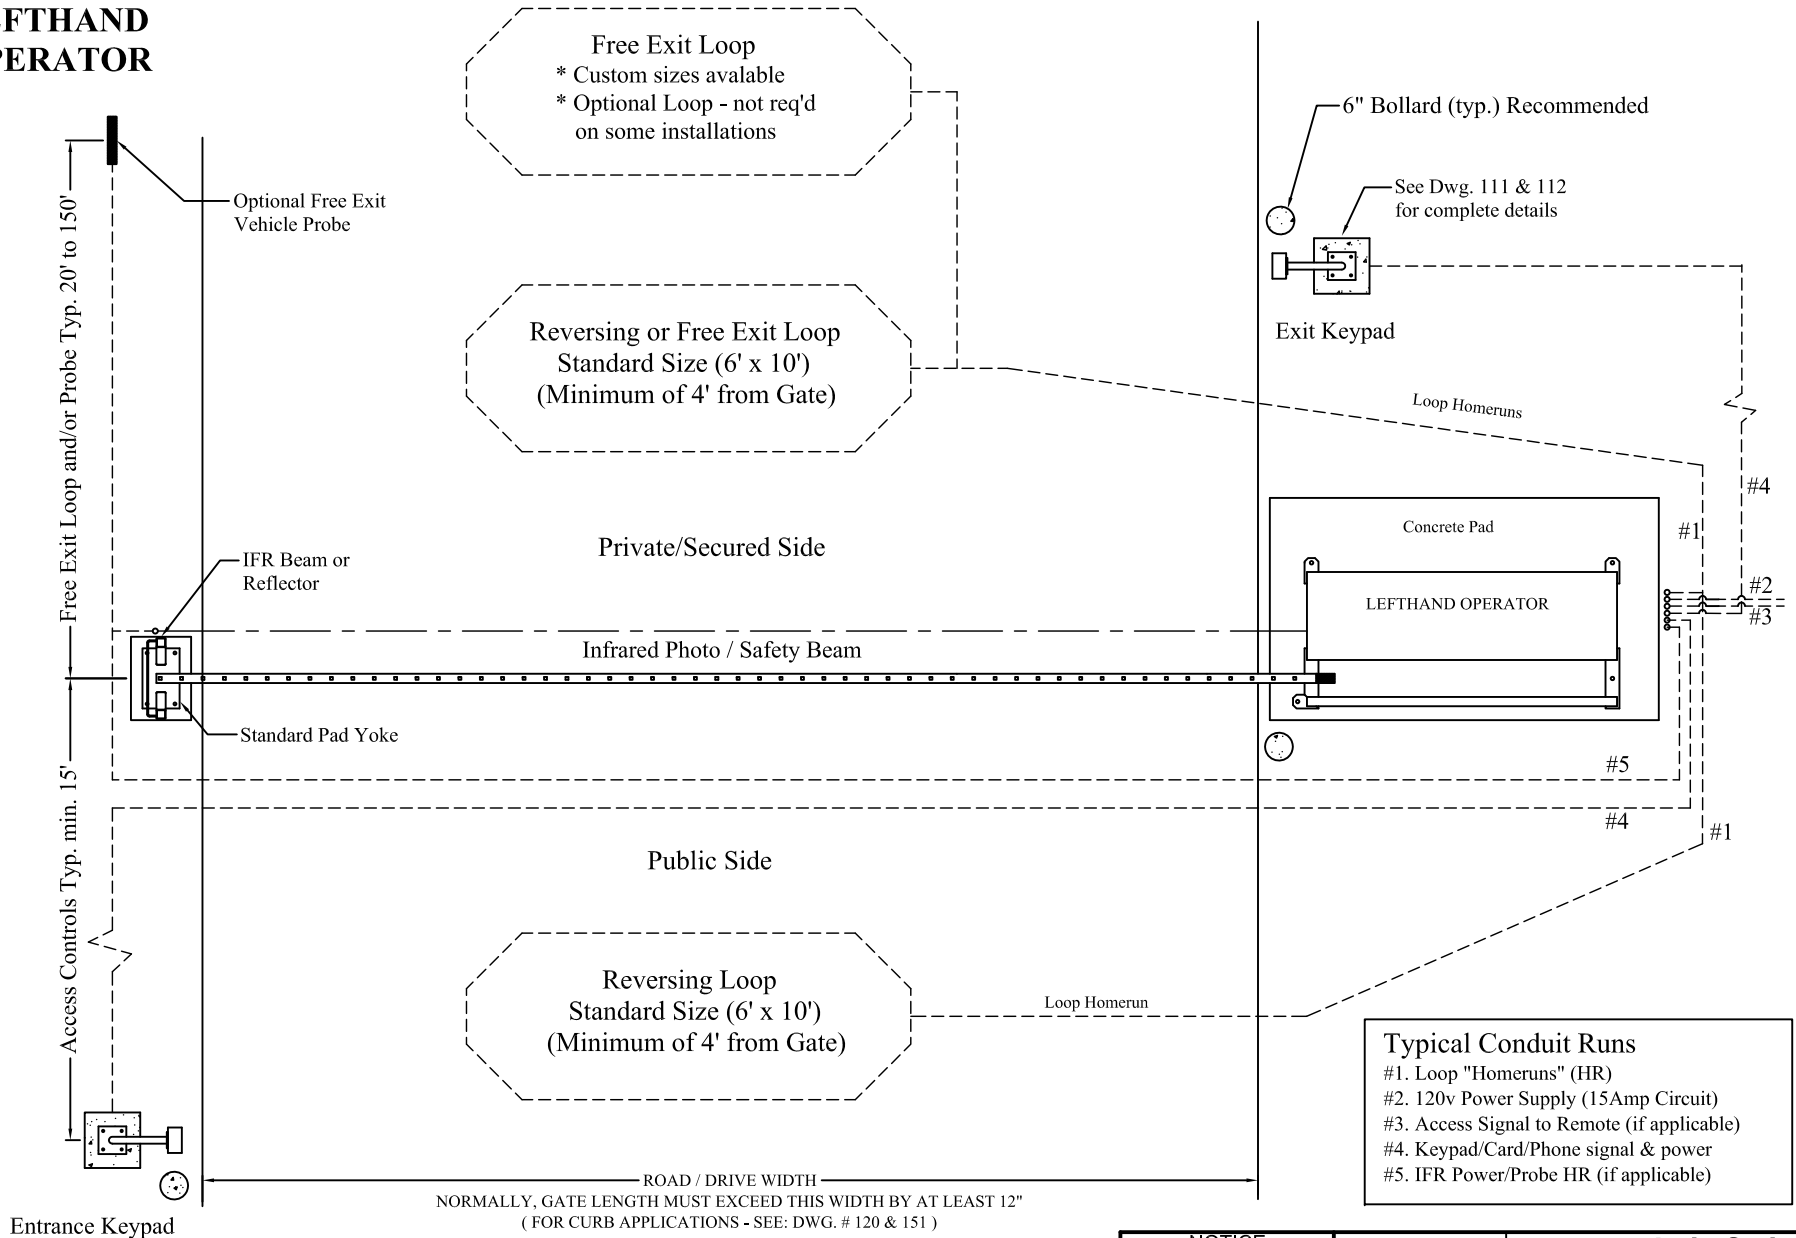

Typical Conduit Runs
 #1. Loop "Homeruns" (HR)
 #2. 120v Power Supply (15Amp Circuit)
 #3. Access Signal to Remote (if applicable)
 #4. Keypad/Card/Phone signal & power
 #5. IFR Power/Probe HR (if applicable)

NORMALLY, GATE LENGTH MUST EXCEED THIS WIDTH BY AT LEAST 12"
 (FOR CURB APPLICATIONS - SEE: DWG. # 120 & 151)

DO NOT SCALE

Rev. No.:	Revisions:	Date:

NOTICE
 THE INFORMATION CONTAINED ON THIS DOCUMENT IS CONFIDENTIAL. ANY DISSEMINATION, UNAPPROVED DISCLOSURE OR COPYING OF THIS INFORMATION IS STRICTLY PROHIBITED.
 UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
 ANGLES ± 1°
 XX ± 1/32, .XX ± .01, .XXX ± .005

Date: 12/20/05
 Dr. By: MKS
 Supercedes: 7/9/04
 Dwg.: 100-L
 Title: Operator and Accessory Site Layout

