


# RIGHTHAND OPERATOR

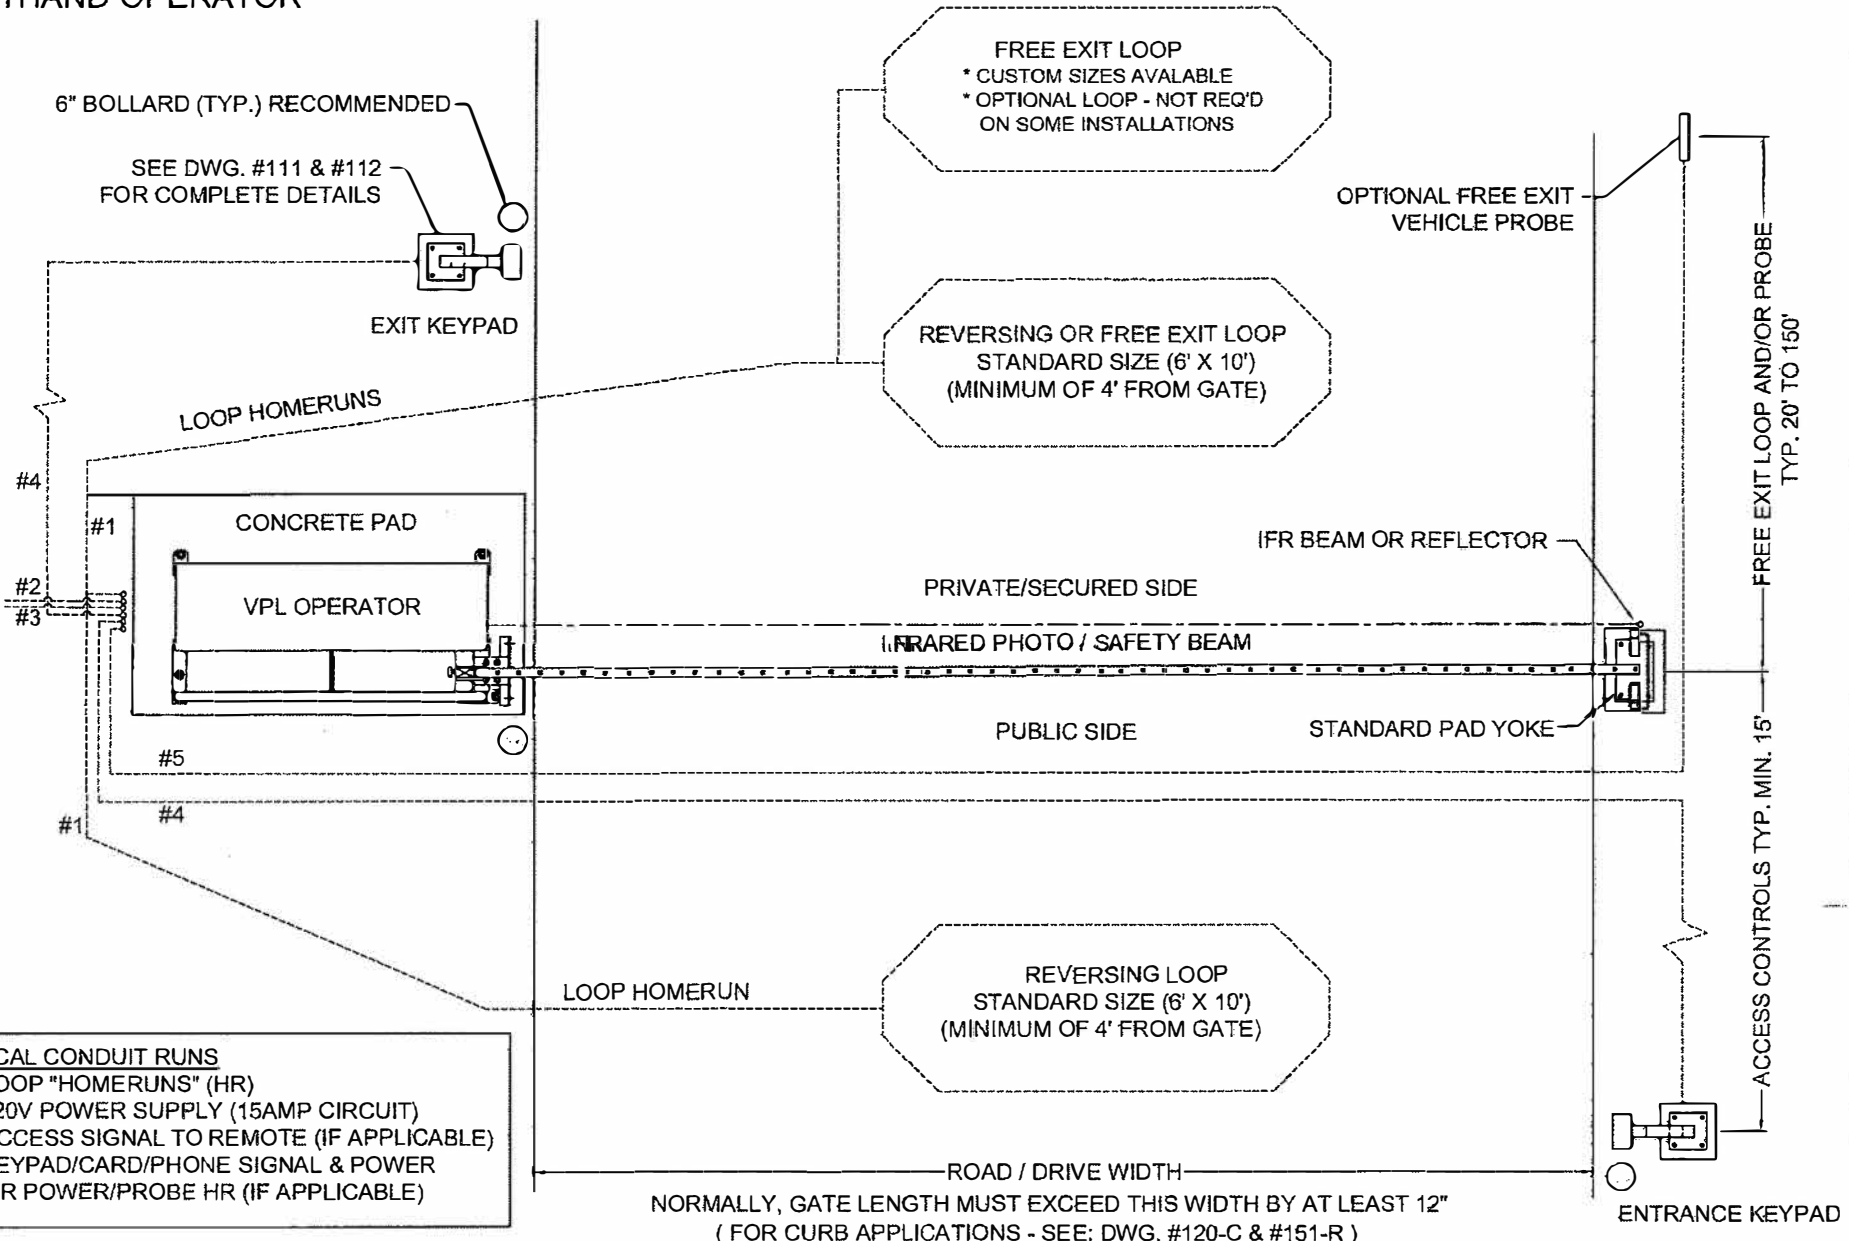

- TYPICAL CONDUIT RUNS**
- #1. LOOP "HOMERUNS" (HR)
  - #2. 120V POWER SUPPLY (15AMP CIRCUIT)
  - #3. ACCESS SIGNAL TO REMOTE (IF APPLICABLE)
  - #4. KEYPAD/CARD/PHONE SIGNAL & POWER
  - #5. IFR POWER/PROBE HR (IF APPLICABLE)

NORMALLY, GATE LENGTH MUST EXCEED THIS WIDTH BY AT LEAST 12"  
( FOR CURB APPLICATIONS - SEE: DWG. #120-C & #151-R )

<b>DO NOT SCALE</b>					<b>NOTICE</b> THE INFORMATION CONTAINED ON THIS DOCUMENT IS CONFIDENTIAL. ANY DISSEMINATION, UNAPPROVED DISCLOSURE OR COPYING OF THIS INFORMATION IS STRICTLY PROHIBITED.  UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES ANGLES ± 1° .XX ± .1/32, .XX ± .01, .XXX ± .005	Date: 12/20/05	 Berlin, Heights, Ohio FAX (419) 588-3514
Rev.:	Description:	Date:	Drn. By:	Ckd. By:		Drn. By: MKS	
A	UPDATED DRAWING	01/22/13	SLD	KLL	Dwg.: 100-R		Title: Operator & Accessory Site Layout (R/H)